



High quality data acquisition and embedded control products.

PIO-DA16/DA4/DA8 Board hardware and software installation on Windows XP

- Physically install the hardware (PIO-DA Board) in the computer (Plug & Play).
- The board is automatically detected on startup.
- Install the software driver using the CD. Ver4.5
Note: Use the Windows Explorer to install the software driver DLL_OCX
- Steps to install the software :
 1. Right Click the CD drive Icon in “My Computer”
 2. Click on “Explore” and follow the path
 3. NAPDOS → PCI → PIO-DA → DLL_OCX → Driver
→PIO_DA_setup_v20208
- Follow the installation instructions as they appear on the screen.